# WC6 SERIES

# **Split-Core Current Transformers**

WC6 Series has long rectangular ID, making suitable for high load and large bus-bar applications. Accessible from either sides allow electricians to open/close easily during metering & energy management installations and retrofits without dismantling power-line. This CT has WC's trademark ergonomic secured 2D-Latch™ feature along with locking and servicing date tag provisions. Install with confidence from made in America design, quality and assembly!

#### **MECHANICAL**

Window Size 2.0" x 5.5" [50.8mm x 139.7mm]
Wire Leads 6ft [1.8m] 16AWG black/white twisted

UL1015 105°C 600V

Operating Temperature -15°C to 80°C (90% Rel. Hum.)

Altitude 6,600ft [2012m] Weight 2.5Lbs [1.1Kg]

Keying Hole Plastic rivets for locking or date tag Ergonomic Arc-Latch™ for EZ-Open, no tool

### **ELECTRICAL**

Primary Input (max.) 2000A, AC Sine-wave 50/60Hz

Secondary Output 5A, full-scale

Accuracy (typical) 0.5%

Linearity 10% - 120%

Polarity White (X1—Hi), Black (X2—Low)

Phase Direction Arrow points toward Load

Frequency 40-400Hz

#### **REGULATORY STANDARDS**

Voltage Rating 600V AC, BIL 10KV AC Full-wave

Construction UL94V-0 flame retardant plastic, CATIII

Double insulations (optional)

Standards UL2808, ANSI C57.13 & IEC61010-1

CSA C22.2 61010-1-12 & CE Mark

### INSTALLATION

For indoor use only. Turn off power source before working on CTs. Observe X1X2 polarity and read manufacture's instructions of the equipment you are connecting to CTs for proper installation guide. Professional installations required for safe handling and operation.




WATTCORE INC | Core Solutions for Energy Management™ 6208 Oakton Street

Morton Grove, IL 60053 (USA)

571.482.6777 | sales@wattcore.com | www.wattcore.com



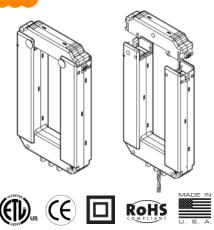


#### MODELS


MODEL	RATIO*	ACCURACY	BURDEN (VA)
WC6-0800-RA5	800:5A	0.5	4.00
WC6-1200-RA5	1200:5A	0.5	5.25
WC6-1600-RA5	1600:5A	0.5	6.25
WC6-2000-RA5	2000:5A	0.5	8.00

<sup>\*</sup>Custom ratio outputs available in mV, V & mA

#### **DIMENSIONS** [mm]

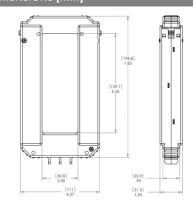

#### SCHEMATIC

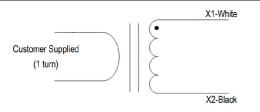



De-energize source before installation! Observe local and national electrical codes for safety and compliance. Licensed electricians required. Use precaution when working with electricity!